



SUNSHOWER

## CHECKLIST INSTALLATION SUNSHOWER COMBI.

Dear customer, thank you for your interest in the Sunshower Combi. We have made a list of the most important technical aspects of the installation. Please read this form carefully, to be sure the Sunshower Combi can easily be installed in your shower.

Please check the following:

- Your shower arrangement has two tiled walls in a corner unit with a right angle.
- Both walls are 30 cm (12 inch) from the corner to a height of 195 cm (77 inch) flat and free (no taps, shower rods, etc).
- The 230V wiring should be installed based on option 1 (wiring through rear wall) or option 2 (wiring in the corner to the ceiling) from the drawing. Option 1 is preferred.
- Consider the power needed for the full body (1995W) and the power needed for the half body (995W). A separate group is not necessary, but preferable.
- Sunshower Combi may not be installed in a steam cabin or sauna.

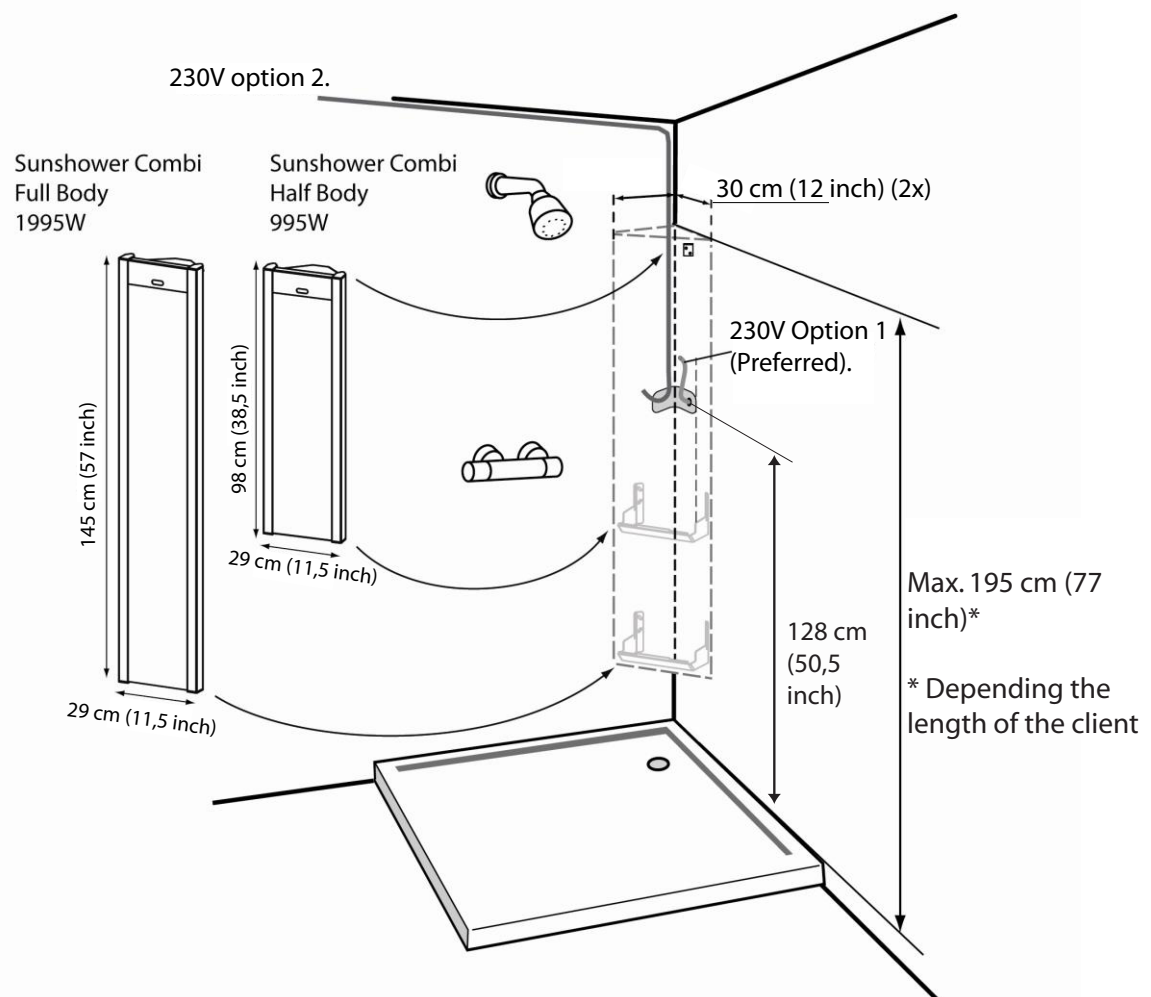


Image: Sunshower Combi installation.