


ASSEMBLY INSTRUCTIONS

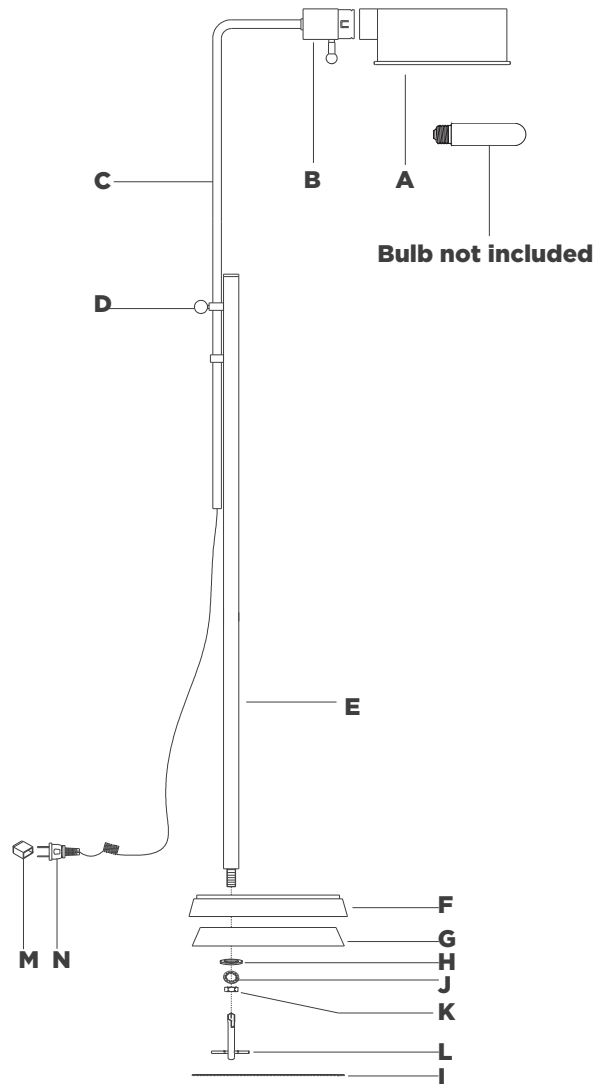

Pask Pharmacy Floor Lamp

Item # TOB1200

NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Install rod (E) to base (F) and loader (G) and secure with metal plate (H), lock washer (J) and hex nut (K) using provided wrench (L).
3. Remove backing sheet from felt paper (I), then neatly apply to bottom side of lamp base.
4. Thread shade (A) to socket (B).
5. To adjust the fixture loosen the adjustment knob (D), adjust rod (C) to desired position, then tighten knob (D).
6. Remove protective cover (M) from plug (N).
7. Plug into electrical outlet and test the fixture.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.